


Addendum: Installation and Quick Start AP9319 and AP9320

Temperature and Relative Humidity Sensor

The temperature and relative humidity sensor kit is provided as an option available for purchase with your unit. Additional sensors can be purchased and connected together with A-Link cables.

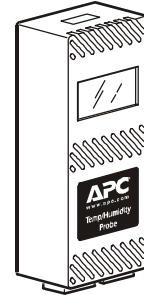

See also


See the AP9520T and AP9520TH installation manual, supplied with the kit, for installation instructions.



Note

Use no more than eight combined AP9520T and/or AP9520TH sensors. Each sensor must have a unique DIP switch address setting to ensure proper operation.

Set the DIP switches on each sensor to a unique A-Link address.

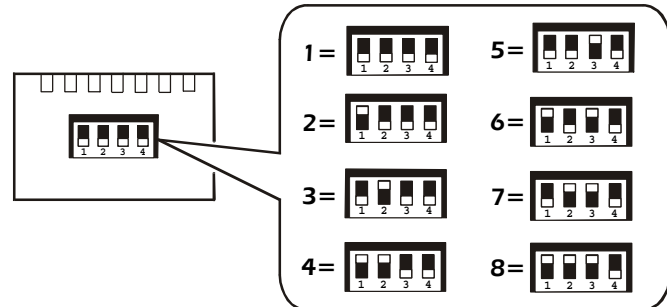

Note

The AP9319 only supports devices addressed with a DIP switch setting of 1 and/or 2.

